


Quick guide for packing the Liftroller Wall and Liftroller Wagon



1: PUT BOTH SIDE FRAMES ON A PALLET.

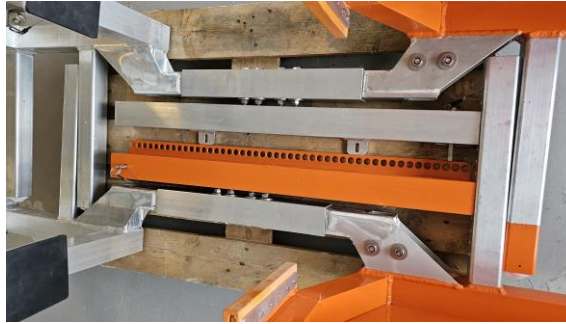

2: PUT OUTER AND INNER LATERAL BEAM LIKE THIS



3: PUT ONE CENTRAL LATERAL BEAM BETWEEN THEM




4: PUT THE ROLLER TABLES ON TOP OF EACH OTHER




5: PUT CEILING SUPPORTS ON TOP



6: PUT THE LAST CENTRAL LATERAL BEAM BETWEEN THEM

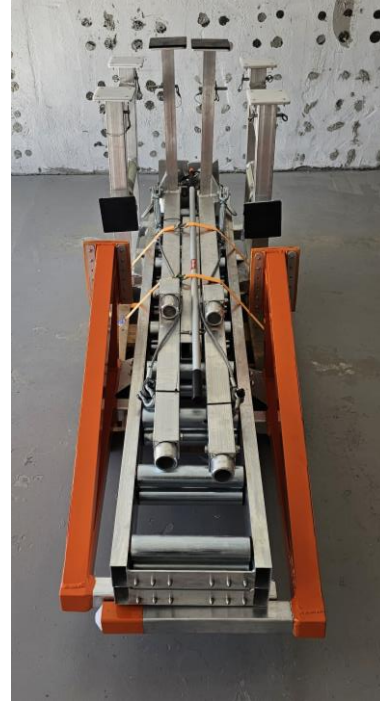

7: PUT THE PULLING HOOK ON TOP IN THE MIDDLE AND SECURE THE LOAD WITH RATCHET STRAPS

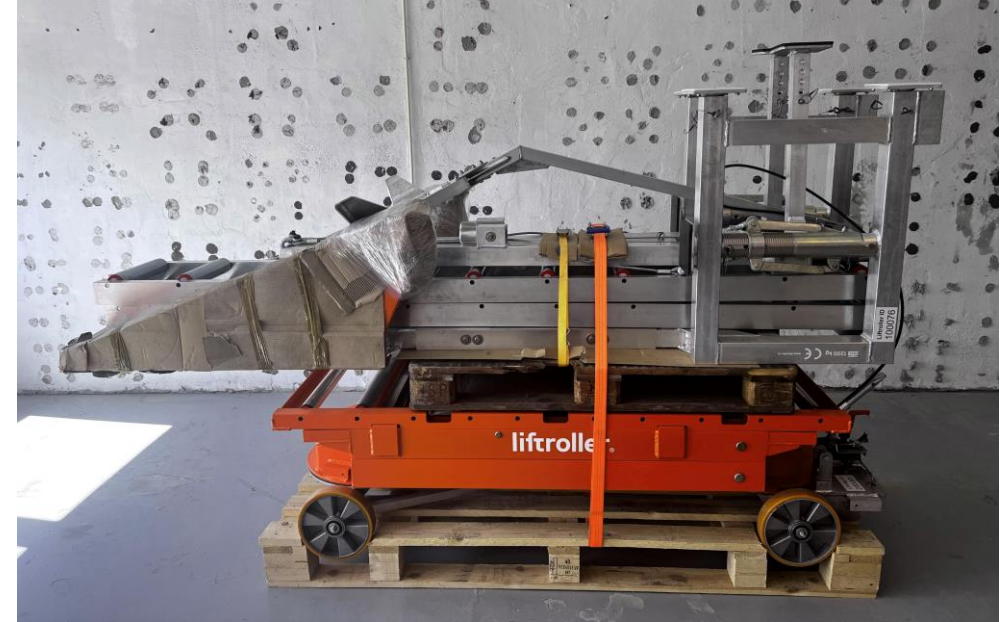

8: FOR TRANSPORT AND STORAGE; YOU MAY PUT THE WALL MODEL ON TOP OF THE WAGON. REMEMBER TO SECURE WITH RATCHET STRAPS BEFORE SHIPPING.

IMPORTANT: DISCONNECT THE TROLLEY HANDLE FROM THE HYDRAULIC PUMP DURING TRANSPORT TO AVOID DAMAGING THE PUMP